



Camera Settings Manual


StarVedia




10/31/2013

V1.0


This document demonstrates using CamView software to setup a StarVedia camera for I-Viewnow.

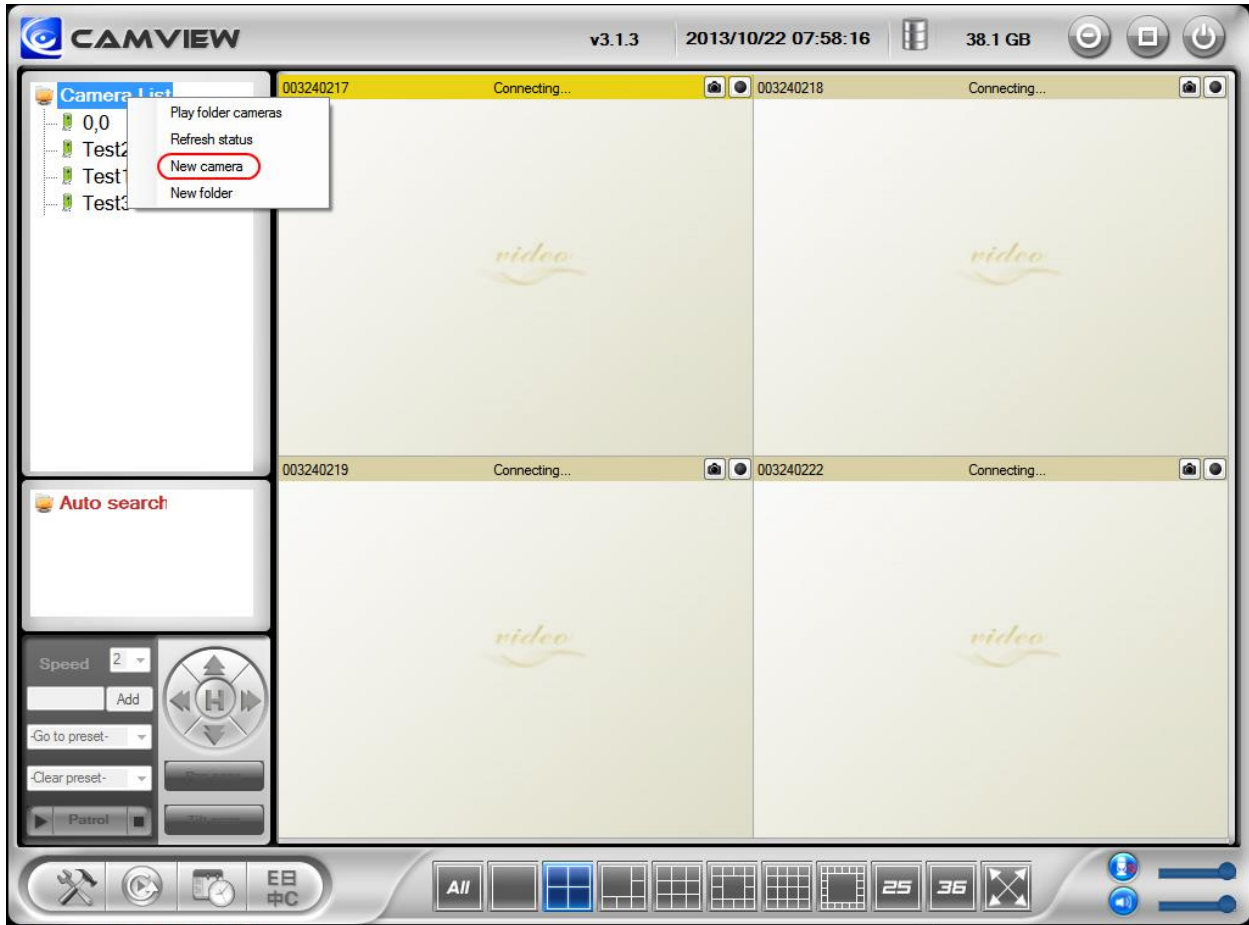

1. Open the CamView Software
2. Right Click "CameraList"
3. Select New Camera
4. Give the camera a name
5. Enter the CamID
6. Enter the Password(PIN)
7. Click OK

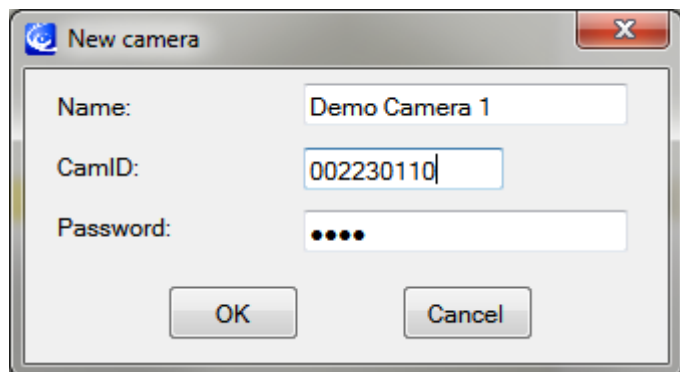

8. Right The camera in the Camera List
9. Click Video Settings
10. Select Quality Tab
11. Choose 128k for Bandwidth
12. Check Select best resolution and frame rate automatically

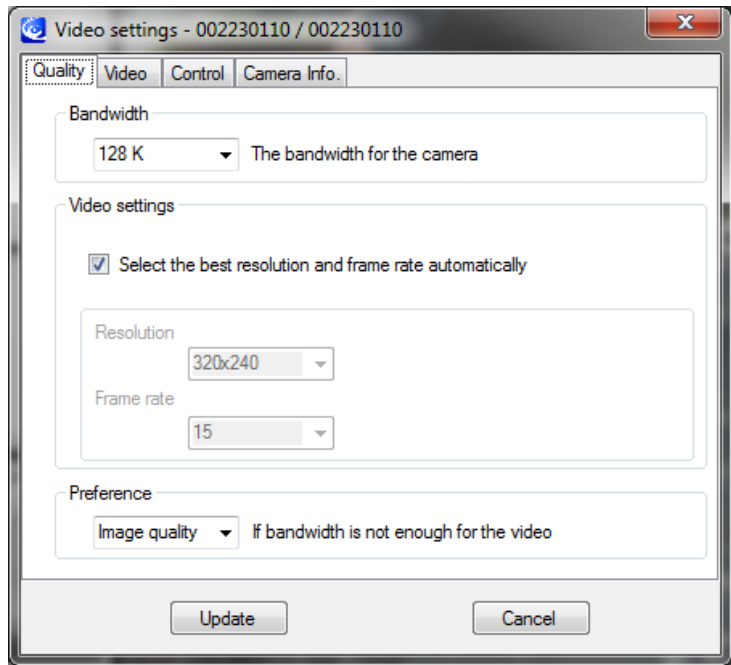

13. Select Video Tab
14. Under OSD check enable time display on video
15. Under Microphone check enabled
16. Click Update
17. When prompted for the user credentials Enter them

Note: Default credentials are admin with no password

